



8831 Keele St., Concord, ON, L4K2N1
 TEL: (905) 303-8700 FAX: (905) 303-7130
 www.anfieldsensors.com

**PRESSURE TRANSDUCERS
 & TRANSMITTERS,
 TC, TG, TP SERIES**

INSTALLATION INSTRUCTIONS

Please check the model designation of the pressure transducer/transmitter to ensure it is being used within its design range. The use of an incorrect model may cause inadvertent operation or failure. The transducer/transmitter should be wired in accordance with the tables and schematic below.

**Wire/Connector Termination
 0-10v output transducer**

CONTACT	DIN M2 / HC	M12	CABLE
+ 14 — 30VDC SUPPLY	PIN 1	PIN 1	RED
+0 — 10V OUTPUT	PIN 2	PIN 3	BLUE
COMMON	PIN 3	PIN 4	YEL/WHT

M12 PIN OUTS



**Wire/Connector Termination
 4-20 mA output transmitter**

CONTACT	DIN M2 / HC	M12	CABLE
+ 10 — 30VDC SUPPLY	PIN 1	PIN 1	RED
4-20mA OUTPUT	PIN 2	PIN 3	BLACK

P106588 REV 0